

Since 1975
Randy's
 Alt. Culture Pioneers

PILOT 2.0
 CONCENTRATE VAPORIZER


THIS PRODUCT DOES NOT CONTAIN TOBACCO OR NICOTINE.
 NOT INTENDED FOR TOBACCO USE. FOR USE WITH LEGAL HERBS ONLY.
 Make sure to keep out of the reach of children and/or unqualified persons.

KIT INCLUDES/OPERATING

- **PILOT 2.0**
- **Dual Quartz Coil**
- **Standard Mouthpiece**
- **Open Top Mouthpiece**
- **Metal Tool/Cover**
- **USB Charging Cable**

The PILOT 2.0 is specifically designed to vaporize your desired concentrate. The 3 variable voltage settings are designed to offer a wide range of experiences for any user. The PILOT 2.0 uses rapid heat technology to heat your concentrates to the desired temperature quickly and efficiently. Your device also comes equipped with a built in silicone storage jar at the base of the battery. This is designed to provide ultimate portability and convenience for the user.

COMPONENTS/ANATOMY

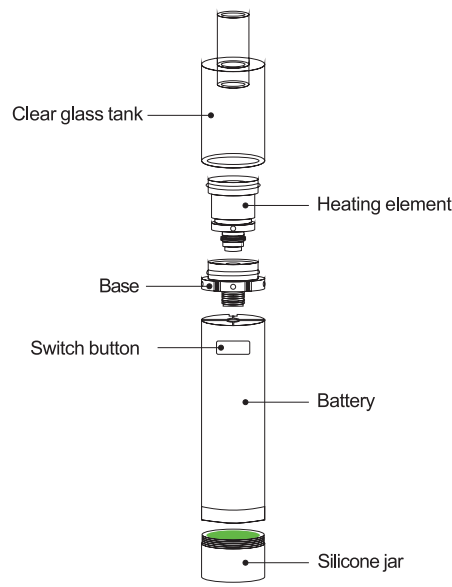

CONNECT WITH OUR SOCIALS

- @RANDYSPAPERS
- @RANDYSPAPERS
- @RANDYSWIRED
- @RANDYSWIRED
- @RANDYSWIRED

LIMITED WARRANTY INFO

Randy's offers 2 types of warranty on all of our vaporizers!

Limited Warranty - 1 Year

Covers defects that may be present such as electrical components.

Limited Component Part Warranty - 1 Year

Covers damages involving glass, coils and/or mouthpieces.

Visit: Randys.com/warranty for more info!



INTRODUCTION

Thank you for purchasing the Randy's PILOT 2.0! Please read and follow the instructions carefully. Understand them fully before your first use. It is recommended that these instructions are put into a safe place for future reference. We hope you enjoy the quality and performance of your new PILOT 2.0 vaporizer.

You must be over 21 years old to purchase and use the Randy's PILOT 2.0. This product should not be used by children, women who are pregnant or breastfeeding, or those with life threatening illnesses without first consulting a doctor!

Randy's PILOT 2.0 is not a medical device and is not intended to diagnose, cure, treat, or prevent any diseases or other conditions. If you have any health problems, consult your doctor before using. Randy's PILOT 2.0 is not intended to administer medicinal or illegal substances of any kind. Any illegal use of this device could subject the user to severe fines, penalties and/or imprisonment under law of your jurisdiction.

SPECIFICATIONS/CHARGING

Battery Capacity: 900mAh
Working Voltage: 3.2V-4.2V
Resistance: 0.2ohm and .7ohm
Pen Size: 19mm x 119mm
Tank Size: 18mm x 48.5mm
Battery Size: 19mm x 70.5mm
Charging Time: 3-4 hours

- To Turn on/off:** Press the button 5 times.
- To Change Temp:** Press button 3 times
- To Preheat:** Press button 2 times (red flash)

- To Charge PILOT 2.0:**
 - Plug the included USB charger into the wall adapter.
 - Plug the Micro USB into the Device. A LED indication will confirm charging.

IMPORTANT: Do not leave the device unattended while charging. Only use the included charger for your device.

OPERATING INSTRUCTIONS

- Step 1:** Carefully remove Mouthpiece.
- Step 2:** Carefully add material under the PILOT 2.0 glass dome.
- Step 3:** 5 clicks to turn the battery on.
- Step 4:** Select Temp Setting. - Click 3 times to cycle between temp. settings.

Blue:	3.2v - LOW
Red:	3.7v - MEDIUM
Green:	4.2v - HIGH

- Step 5:** Hold Button for 7 seconds as device quickly heats to desired temp.
- Step 6:** Once the device is to desired temp. inhale slowly. Enjoy.

Warnings:

- Vaporizer may be hot after use. Be cautious when touching the device after use.
- Turn off the vaporizer when not in use!

TROUBLESHOOTING

No vapor being produced:
 1. Ensure device is turned on.
 2. Make sure your battery is charged.

Regular maintenance and cleaning of your PILOT 2.0 is highly recommended.

Do not use the PILOT 2.0 if the walls or mouthpiece become chipped, cracked, or broken.

If you lose any part or need a replacement, visit the shop where you purchased the device or you can shop Randys.com.



have an issue?

EMAIL:
SALES@RANDYS.COM
AND WE WILL GET YOU TAKEN CARE OF

WARRANTY CLAIM INSTRUCTIONS

To file a claim online:
Randys.com/warranty
 or
Email: Sales@Randys.com

We can not replace any unit or part without a proof of purchase. Warranty claims usually take 2-3 weeks to process.

Please Return to:
 Randy's Warranty
 P.O. Box 1253
 Holland, OH 43528

The Randy's Glide 2.0 has a one year warranty from date of purchase. Defective part must be returned within 365 days of receipt date.

- Send us:**
1. The defective part (Please only send parts that are defective and clean)
 2. A copy of your proof of purchase
 3. A copy of proof of legal age
 4. A note detailing the issue(s)
 5. Return address

⚠ WARNING: Cancer
www.P65Warnings.ca.gov